

BERNINA
880

 
Meet the B 880

Mastery LIVE Lesson 1 by Susan Fears

Navigation Tips

Bread Crumb Navigation

- Learn to navigate within menus using the breadcrumb icons rather than using the 'close' box to exit. This is a time-saving feature when setting preferences within several menus in Setup and when setting multiple decorative preferences within the 'i' menu.
- Select Setup > Sewing Settings > Programmable Buttons > Pattern End

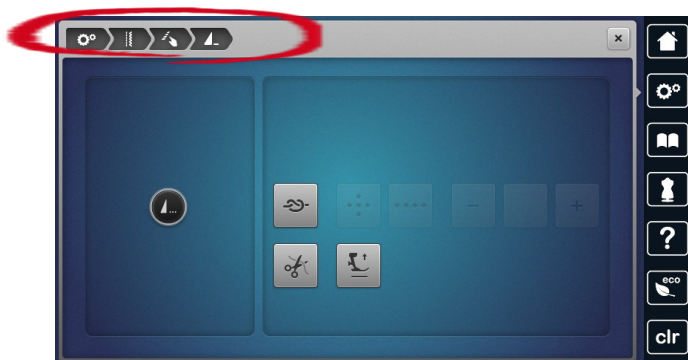


- To set another function in Programmable Buttons, select the Programmable Buttons breadcrumb
- To set another function within Setup, select the Setup breadcrumb

Setting up the B 880 for the way YOU sew

- Set the screen color & texture: Setup > Personal Settings
- Activate/Deactivate the tie off at the beginning of the stitch through Setup > Sewing Settings
- Program/Re-program head frame buttons by accessing Setup > Sewing Settings > Programmable Buttons > button to program. Re-program as desired per project
- Take advantage of Hover with needle stop down by 1) setting the needle to stop down with the on-screen icon and 2) Programming Hover through Setup > Sewing Settings > Programmable Buttons > Needle Stop Down. Set the foot to raise, ½ raise or stop down
- Program the Foot Control through Setup > Sewing Settings > Foot Control. The foot control default setting is set to move the needle to the next position (up or down) when the heel of the foot control is depressed. The programmable foot control options allow the heel-down to tie-off and/or cut the thread instead

 Programmable Buttons

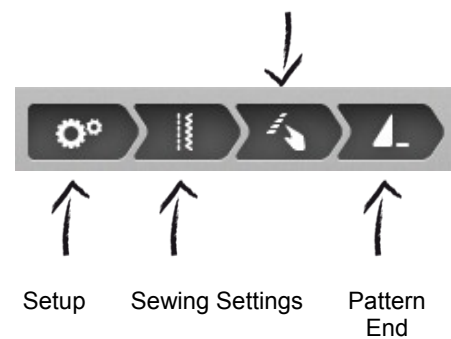

B 880 Tidbits



- Where is Pattern Begin?

The Pattern Begin icon only appears on screen in the stitch altering area only when the pattern is not at the beginning. To get to the beginning of the pattern, select the on-screen icon. If it is not visible, then the pattern is at the beginning.



- How to set Pattern end without knot & cut?

Select Setup > Sewing Settings > Programmable Buttons > Pattern End > Deactivate the knot and cutter

 
- How do I turn off the knot at the beginning of the stitch

Select Setup > Sewing Settings > move the Knot button to off



- Where is the Needle-minder?

Locate the Needle-minder from the Status bar > Needle Security

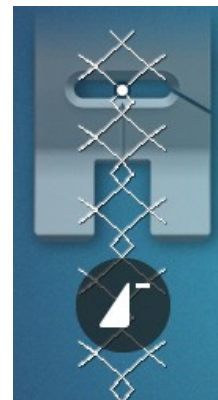

For Additional Educational Materials:

- *My BERNINA Workbooks*
- *Video Tutorials packed with B 880 and also on the YouTube BERNINA channel*
- *B 880 Tool Tips on YouTube BERNINA channel*
- *bernina.com > Experience section for projects written using the B 880*