

Stitch Recipe:

830 **Directional DELIGHT!**

BY JILL BRALEY

With the 830, this stitch recipe is sewn completely in one direction, with no pivoting or realignment. What makes the 830 directional stitching stand out from that of previous models? The connecting stitch screen – there's no longer any need to figure out the movement using a compass, as the 830 determines it for you based on the stitch arrangement you create in the connecting stitch screen! What could be easier?

830 Supplies

- Sideways Motion Foot #40C
- Needle appropriate for thread selected



 
1- Open Combi Mode.




2- Gather stitches - #761, one of 261 new stitches found on the 830!



3- Gather another stitch, #439. Select the new Multi-Directional Sewing icon.

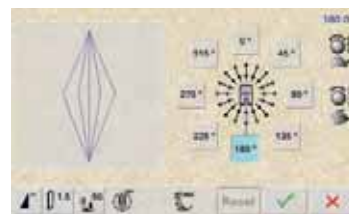

 4- Instead of pivoting and rotating your stitches manually, the 830 offers NEW functionality. It's able to rotate a large variety of stitches in 360 different directions!

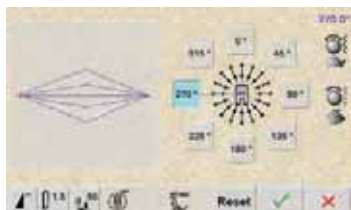


5- Rotate the stitch pattern in direction 270°; confirm the changes by touching the green checkmark (✓).




6- The combination is beginning to come together, but there is even more that can be done to line up the complete combination just the way you want it.



 
7- Touch the Multifunction icon (eye-glasses) to preview the combination as it will sew out. The 830 offers yet one more new exciting feature with the new Connecting Stitches icon.

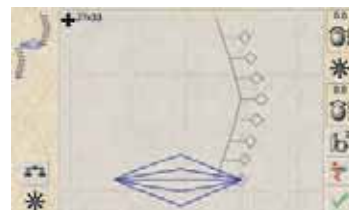

 8- In the Connecting Stitches screen, use your finger or touch pen to "drag and drop" your stitches to the perfect location to sew exactly what you envision.

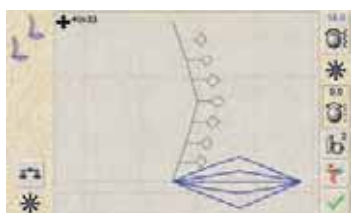

 9- Here is the adjusted combination. Look in the far left preview screen; notice that the stitches will not sew out in a continuous straight line. Let's make one more adjustment.

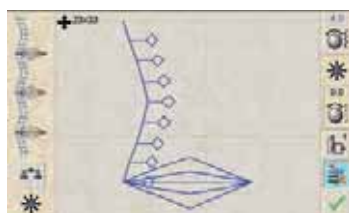

10- The Connecting Stitches screen enables you to move single motifs or groups of motifs. The group was moved to create a straight row of continuous stitching on the left. Confirm your creation by touching the green checkmark (✓).



11- Preview screen. Touch the red X to leave the active screen and return to Combi Mode.



12- Combi Mode screen and you are ready to sew! Touch Pattern Begin; attach Sideways Motion Foot #40C; stitch your creation. No pivots or rotations are necessary – the 830 moves and feeds the fabric for you! All you do is simply guide the work.

 
 
MANUAL SEWING INSTRUCTIONS FOR OTHER MODELS

Technique

Attach Clear Foot #34/34C. Select artista stitch #740 or other scallop stitch. Sew the first pass.

Attach Open Embroidery Foot #20/20C. Select artista stitch 439 or other diamond-shaped stitch. Engage the Single Pattern function and the Securing function.

Line up the beginning of the stitch as shown in the photo and sew the pattern perpendicular to the first row of stitching. Repeat as desired.

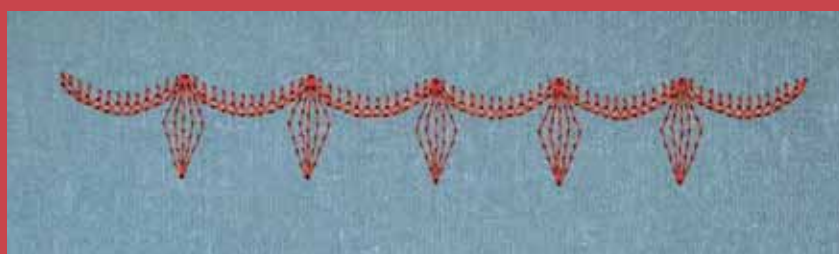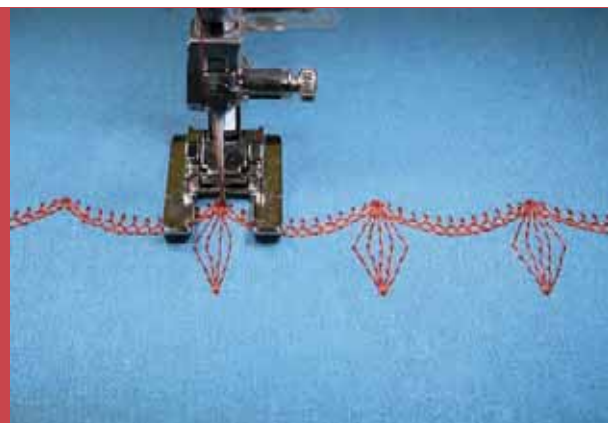

Supplies

- Clear Foot #34/34C
- Open Embroidery Foot #20/20C
- Needle appropriate for thread selected
- Marking tools